



Jets™ Jade Floor is a pedestal pan design. With a focus on both simple elegant design and comfort, this floor mounted toilets contemporary look complements any installation.


- Low water consumption with reliable flush and discharge.
- High quality vitreous china bowl with excellent flushing.
- Quick and quiet closing toilet seat and lid.
- Easy to clean. Designed for easy maintenance.

Warranty

All products of the company are sold and all services of the company are offered subject to Jets Vacuum AS General Sales Conditions detailing warranty and terms and conditions of sale, copies of which will be furnished upon request. The information provided herein is for guidance only; it does not constitute a guarantee of the performance or specification of any individual product or component.

Disclaimer

Product color reproduction is as near to actual color as product methods allow. All rights reserved. Information is subject to change without notice. No part of this document may be reproduced in any form by any means without prior written approval.

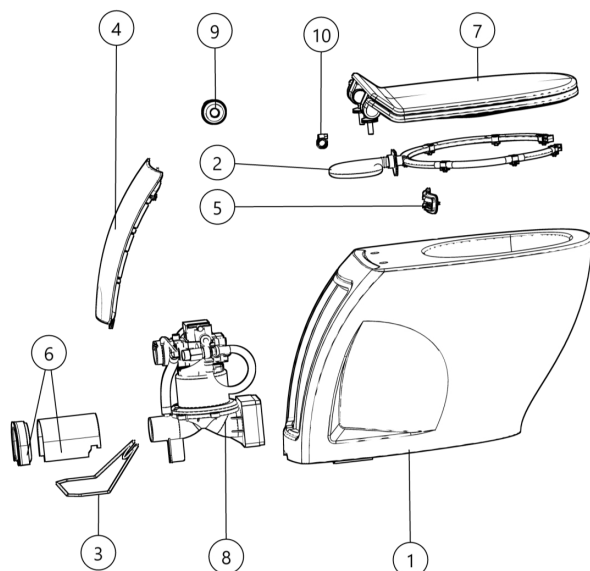

Technical Data

Outside Dimensions.....	695 x 355 x 480 mm (LxWxH)
General Tolerance.....	Bowl dimensions ±3%
Discharge Valve Outlet.....	Outside diameter Ø 50 mm
Water Connection.....	1/2" male BSP
Generic Material.....	Porcelain
Net Weight.....	N/A
Coating.....	Vitreous China

Operating Data

Flushing Time.....	5 seconds
Discharge Time.....	2 seconds
Water Pressure.....	2-7 bar
Operating Vacuum.....	Recommended 30-55 % Vacuum
Air Consumption.....	Approx. 48 liters at 50% Vacuum
Water Consumption.....	1 liter/s (3 bar)
Temperature Range.....	Minimum 1°C to Maximum 60°C (unless frost protection measures are taken)

Note:.....
Values are dependent on valve type.

Options

Optional functions compatible with this product.

VFD: Vacuum Flush and Discharge

Patents and Trademarks

Components: VFD™, Helivac™, VC™, VOD™, CVS™ and Softsound™ are trademarks and/or registered trademarks of Jets. © Copyright 2011, Jets AS.

① Toilet Bowl JETS Jade Floor.....	061061000*
② Flushing Ring.....	069513600*
③ Spring.....	101101306*
④ Cover, Complete.....	069000400*
⑤ Air Inlet.....	069000401*
⑥ Pipe Cover.....	069000402*
⑦ Seat & Cover, Jade.....	069608900*
⑧ Valve.....	See options listed above
⑨ Release Mechanism.....	See product selection
⑩ Hose Clip 13-20mm.....	034233401*


* Component/s available as replacement parts.

Accessories

Construction Characteristics

Vacuum Breaker Kit.....	034507320
Rubber Elbow, ø50 w/Hose Clip.....	034505450
Rubber Sleeve, ø50 w/Hose Clip.....	034505550
Rubber Elbow, ø50/ø60 w/Hose Clip.....	034512802
Rubber Sleeve, ø50/ø60 w/Hose Clip.....	034512902
Rag Hook, 15mm w/support.....	034102902
Rag Hook, 25mm w/support.....	034102904
Pipe Packet.....	034399400

Dimension Drawings

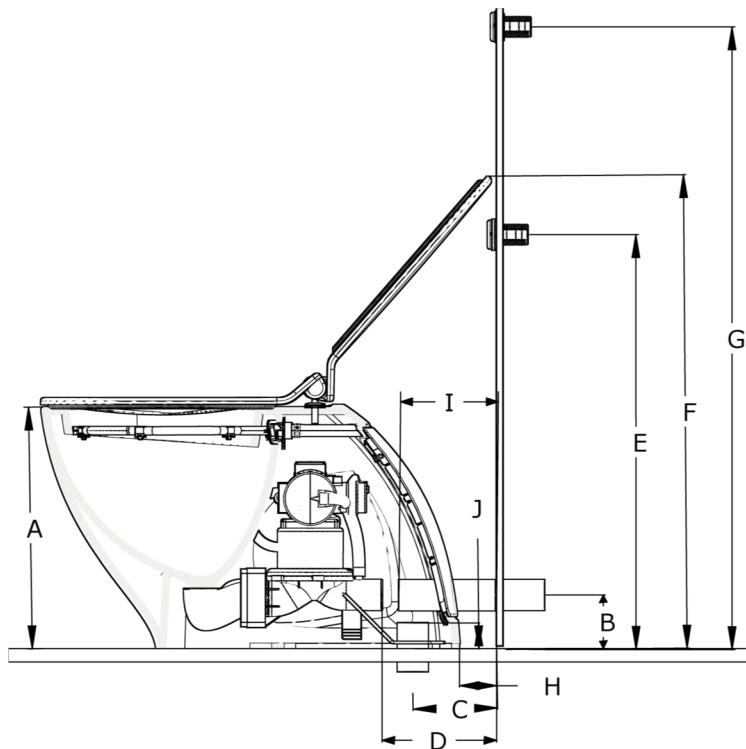

A.....	Approx. 410mm	F.....	830mm
B.....	100mm	G.....	Release mechanism - public toilet height 950mm
C.....	(If H is 40mm) - 115mm	H.....	(see note) - 40mm
D.....	(If H is 40mm) - 160mm	I.....	(If H is 40mm) - 155mm
E.....	Release mechanism - normal height 670mm	J.....	65mm

Note:

If the toilet is placed further than 40mm away from the back wall, the values of C, D, F and I will change.

H - Should be a minimum of 40mm and a maximum of 70mm.

Important Health and Safety Information

Installation, operation and maintenance must be carried out in strict accordance with this guide and with all applicable regulations. For your own protection and the protection of others, it is necessary to familiarize yourself with, and always follow, the contained safety and environmental precautions for our products.

This manual is an integral part of the product/delivery. Always keep it in a safe place for future reference. It is entirely the owner's responsibility to ensure that all safety and environmental measures, in accordance with local, state and federal laws are followed. Jets Vacuum AS assumes no responsibility for equipment damage, personal injury or death and/or delays that result from a lack of respect for the instructions for installation and/or use as stated in this documentation. Disregarding these instructions may invalidate all warranties.

Safety information references are in accordance with Jets Vacuum AS documentation system. If you do not understand the warnings, stop work immediately and contact Jets Vacuum AS (citing the safety reference number) for further clarification.

For further information about the included warnings or any other safety concerns please contact Jets Vacuum AS.

Safety Warning Symbols

 General information to all users.

 Symbol denotes required personal protective equipment is required.

 CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or equipment damage.

 Symbol denotes required personal protective equipment is required.

 DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury or equipment damage.

Important Health and Safety Warnings

 **1.1 Warning**
Jets Vacuum AS recommend qualified person(s) in accordance with all applicable codes and standards to carry out all installation work, electrical wiring, plumbing and operate this product. Equipment damage, injury to personnel or death could result from improper installation/use.

 **1.3 Warning**
Failure to properly lift and support equipment can result in serious physical injury and/or equipment damage. Lift equipment only at specifically identified lifting points or as instructed in the current IOM. Note: Lifting devices (eyebolts, slings, spreaders, etc.) must be rated, selected, and used for the entire load being lifted.

 **1.5 Personal Protective Equipment - Goggles**
Wear safety glasses with side shields at all times when working with equipment.

 **1.7 Warning**
Keep other persons at a safe distance from work area.

 **2.14 Warning**
The equipment safety is guaranteed only if used in compliance with the instructions provided. Do not exceed the limits provided.

 **1.2 Warning**
Be thoroughly familiar with the controls and the proper use of the equipment prior to installing, starting or using the equipment. Know the equipment application, limitations and potential hazards.

  **1.4 Caution**
Safety equipment (PPE) necessary for the prevention of accidents at the installation and operating site must be provided in accordance with local regulations.

 **1.6 Warning**
Keep work area clean, uncluttered and ensure adequate lighting.

 **1.9 Personal Protective Equipment - Gloves**
Wear suitable protective gloves at all times when working with equipment.

  **12.5 Notice**
Use this equipment only in the manner intended by Jets Vacuum AS. If you have questions after reading these instructions contact Jets Vacuum AS directly.

Delivery, Receipt of Goods and Transportation

Goods to be protected against shock, dust, humidity and moisture. Suitable adequately dimensioned transporting equipment is to be used. Note that the equipment may contain components that are easily damaged as a result of inappropriate handling. Jets Vacuum AS is not responsible for or liable for delivery delays resulting from occurrences outside of Jets Vacuum AS' immediate control. On receipt of goods, check for visual damage. Any damage detected after dispatch should be reported immediately to Jets Vacuum AS. Damages and/or discrepancies must be reported in writing no later than eight (8) days after receipt of goods. Commissioning must be postponed until the equipment has been inspected. Do not dispose of damaged items. Your direct supplier will advise you of the procedure to follow.

Storage

Unless otherwise specified, goods are to be stored in a dry environment between -30°C and +40°C prior to installation. The storage location must be dust free, low humidity (≤95%) and be free from moisture. Keep clear of foreign objects.

Installation to End Use

Site to be a dry environment between +0°C and +60°C. Use in environments below 0°C requires use of antifreeze in liquids. The site location is to be low vibration Vrms <0.2 mm/s) with vibration resistance to acceleration up to 0.7g. The site is to be dust free and protected from grinding and welding. Goods are to be stored as per the instructions for delivery, storage and transport. A visual inspection is to be carried out on receipt of goods as well as at the time of installation to ensure that storage and transport conditions after receipt have not compromised the quality of the product/s.

Pre-Installation

Standards and Regulations

To install a Jets™ product, it is first required that the room be prepared according to all local, state and federal standards and requirements. Industry specific standards must also be met. Considerations that must be made include but are not limited to:

- Appropriate dimensioned drain pipes.
- Water barrier or membrane.

Installations required to meet AS/NZS 3500 series of Standards must adhere to the following:

(Ref: Australian and New Zealand Standards: AS/NZS 3500 - AS3500 Part 2 Sanitary Plumbing and Drainage)

- Discharge by a vacuum toilet system shall be regarded as "pumped discharge" and shall be pumped according to AS/NZ3500 "Pumped Discharge" requirements.
- Installation of the vacuum toilet system shall be according to the requirements of AS/NZ 3500.2 Sanitary Plumbing and Drainage.

Tools and Training

No special tools other than those used in standard plumbing installations are required. No special training is required to install this product.

Water Barrier

Note that in some countries, and as per the majority of standards and regulations, it is prohibited to mount toilets directly onto the wall if mounting requires that the water barrier be compromised. Check requirements according to local codes and standards before beginning any installation work.

Pre-Installation Considerations

It is recommended that items such as wall mounted release buttons, drainage and piping etc. is installed prior to installation of the toilet.

Connection with Mains Water

The connection required is a 1/2" BSP standard connection. The water pressure must be a minimum of 2 bar and must not exceed 7 bar.

Connection without Mains Water

The toilet may be connected to a local water supply such as a container, tank or can. A water pump must be used. Refer to the individual product data sheet for further instructions regarding connections.

Backflow Prevention

Backflow Prevention

Please refer to local, state, federal and/or international regulations regarding the extent of backflow requirements for your specific installation.



For installations whereby the valve is to be connected to a drinking water supply, it is recommended that the water connection is installed with a backflow prevention device. Please refer to the local regulations in your area. If backflow prevention is required in Australia, refer to AS/NZ3500.1 Backflow Prevention.

Toilet Connections

Installation may vary depending on plumbing arrangements. Note that the following methods are available for the toilet type.

Installation Alternative 1

Installation Alternative 2

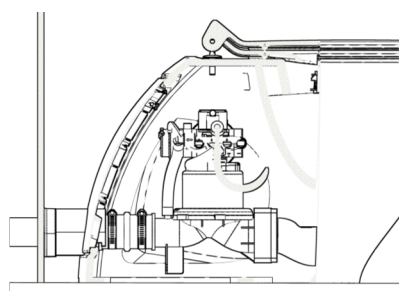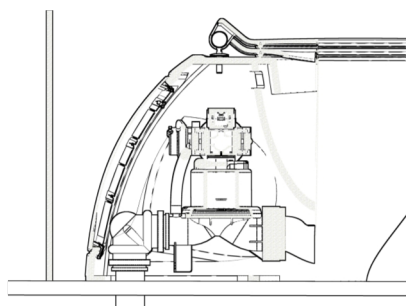

General Installation Information

Note: To avoid leakage between the toilet valve and the toilet bowl, it is important that the pipe is correctly aligned. Connections are to be secured with hose clamps.


Installation

General Disclaimer

Drawings provided in the following examples are for illustration purposes only. Product details may vary from your individual purchase.


Installation Instructions

Toilet installation requires the following procedures to be carried out. For more specific technical details, refer to the individual data sheet. For further information on any of the instructions supplied, any questions regarding installation or the products, please contact your local supplier or Jets™ Service Department.

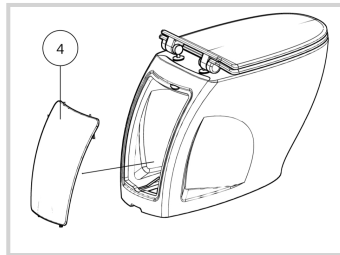


1

For installations with a pre-installed valve, go to step 3.

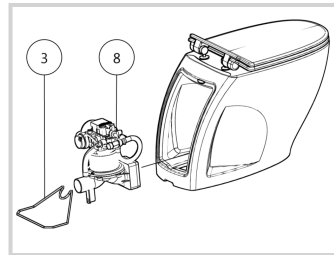


2

Install the toilet valve (8) and the spring (3) as per the products installation instructions found in the products data sheet.

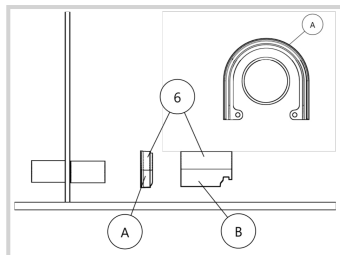

3


If using Installation Alternative 2, affix the cap (A) from the Pipe Cover (6) to the wall. (B) will be installed later.

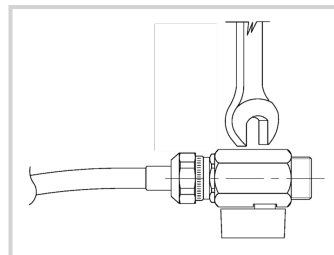

4

Move the toilet close to the wall.


Connect the ball valve from the toilet valve to the water main. Note: Do not over tighten.

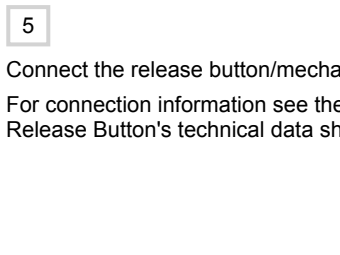

5

Connect the release button/mechanism to the toilet valve.


For connection information see the installation description provided in the Release Button's technical data sheet.

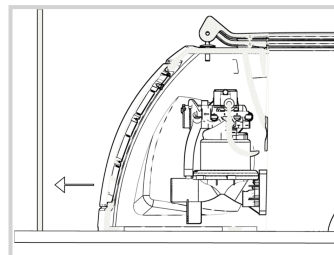

6


Press the valve onto the pipe connection securely.

Note: Refer to Toilet Connections - Installation Alternative 1 and Alternative 2.

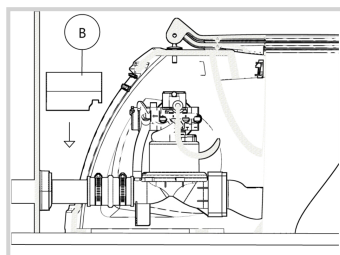


7

Adjust the length and install the Pipe Cover (B) between the toilet bowl and the wall to cover the connections.

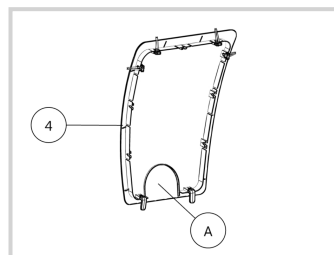


8

If using Installation Alternative 2, use a cutting knife to cut out the pipe access hole (A) in the back cover (4).

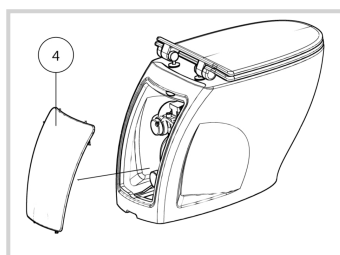

9


Install the back cover to the rear of the toilet bowl.

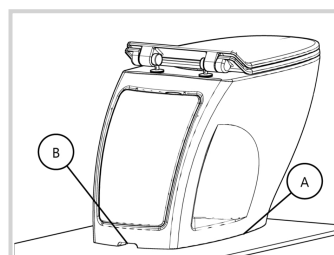

10

Use silicon or similar beneath the toilet bowl (A) to secure the bowl to the floor.

Make sure you do not block the drain opening (B).

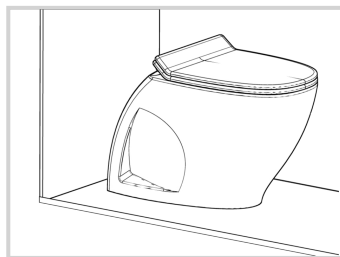

11

Completed.

12

Function Check to be Completed Prior to Use

1. Check that the inside of the toilet bowl is empty of packaging material, etc.
2. Ensure that the discharge valve has been securely connected to the outlet pipe.
3. Check that the water supply is connected and water pressure is adequate.
4. Turn on the water supply.
5. Press the release mechanism to activate the valve.
6. Check that the bowl fills with water.
7. Check that sufficient vacuum is created when activating the release mechanism to release the contents of the bowl.
8. Check that the water level in the bowl is restored.
9. Check that water is dispersed on the bowl surface by the flushing mechanism.
10. Check that there are no water or air leaks.

Service and Maintenance

Out of Use

The following procedures are to be followed if a toilet is to be out of use over a longer period of time (i.e. for cabins and recreational houses).

1. Close the water supply to the toilet.
2. Activate the release button to run a flush cycle, emptying the toilet of water.
3. Close the toilet seat cover.
4. CAUTION: This toilet is not intended for use in temperatures below freezing without appropriate antifreeze measures being taken. For locations where freezing may occur, certain protection measures must be taken. For further information contact Jets Vacuum AS or your nearest supplier for a copy of technical information regarding freezing protection measures.
5. CAUTION: Never use automotive antifreeze (ethylene glycol) in the toilet system.
6. Turn off the power.

NOTE: Failure to adequately protect the toilet system from damages may result in void of your warranty coverage.

NOTE: Jets Vacuum AS reserves the right to deny any warranty claim submitted if the claim is caused by freezing damage.

Cleaning Instructions

1. Mild soap or biological cleaners are recommended for cleaning the toilet. See Jets™ product range for suitable cleaning solutions.
2. Do not use cleaners that create foam.
3. The toilet is to be cleaned regularly to maintain hygiene. Also note that maintaining water in the toilet bowl will prevent odors.
4. Do not use drain cleaner, bleach or other caustic cleaners. These types of cleaners can damage components in the toilet system and damage the seat and cover hinges.
5. For mineral scale buildup, we recommend use of Jets Vacuum AS biological descale products. Contact your Jets Vacuum AS supplier for information.

Spare Parts and Accessories

Available spare parts are indicated in the component list for the toilet. Spare parts and accessories can be ordered via your local Jets Vacuum AS supplier. For multi-toilet installations, a complete recommendation for spare parts is available. Contact your Jets Vacuum AS supplier for details.

Service and Maintenance

Jets Vacuum AS provides all customers with 24 hour worldwide technical assistance. For urgent matters please contact Jets Vacuum AS service department directly at +47 70039100. For other matters, please contact your nearest Jets Vacuum AS supplier.

1. Disassembly of the toilet must be carried out by a licensed professional.
2. All local, state and federal regulations regarding water barriers and plumbing must be adhered to.
3. Refer to the individual product data sheets for more specific information. Refer to the products troubleshooting information for general maintenance.
4. It is recommended that service and maintenance routines be carried out in accordance with the information in this document.

When making enquiries, please have the following information available.

1. Toilet model number.
2. For valve enquiries: Valve serial number (the serial number identification is located on the label applied to the valve).
3. Part number, description, quantity (see the product component list for details).

Locating a Water Leak

Make a practice of regularly checking around the toilet, piping and pump for any signs of a water leak. Check for wetness, mold or foul smells, as that might indicate a leak.

If you suspect a leak anywhere in your plumbing system, call in a professional to make a repair as soon as possible.

Scheduled Maintenance

Interval	Action	Note
Regularly - dependent on frequency of use.	Clean the toilet.	Clean the toilet as per instructions provided in the products technical information.
As required.	Check for damage to equipment. Replace or repair damaged equipment and take measures to prevent future damage to the system.	Note that frost and/or freezing may damage sanitary systems if precautions have not been taken. Contact your nearest Jets™ supplier for information on Jets™ range of frost protection products for installations in cold climate locations.

Troubleshooting

Jets Vacuum AS provides the following troubleshooting information to assist in resolving issues that may arise with your installation. For more detailed information or assistance, please contact Jets Vacuum AS.

Problem	Cause	Action
Water is refilled in the toilet, but the content is not discharged	Loss of vacuum in the toilet system or piping system.	Check the vacuum level to ensure that it is adequate.
		Check the water level in the pump to ensure that it is adequate.
		Check the pipes and any connected equipment including the toilet valve, pump etc. for foreign objects. Remove any blockages in the system.
The normal water level in the toilet bowl is reducing or low.	Low water pressure.	Check that there is no damage to the piping system.
		Increase the water pressure.
The toilet bowl is slow to empty.	The pump or pipes are blocked.	Check the filter in the water connection or ball valve to ensure that it is not blocked. Replace the filter if required.
		Check for foreign objects and remove the blockage.
Air bubbles in the toilet bowl.	Blocked pipe outlet.	Check for mineral scale build-up and descale the affected areas. See Jets™ selection of cleaning products for this purpose.
		Check for blockages and remove. Note blockages may be caused by freezing, etc.

Backflow in the installation.

Check the pipes have been correctly installed.

The Non-return Valve on the discharge line (if installed) is malfunctioning.

Clean the Non-return Valve.

If connected to a tank, the tank could be full or the air overflow blocked.

Check that the air overflow is open.

Empty the tank.
