



Jets™ Rag Hook is designed to prevent non-flushable items from entering pipes.

## Technical Data


Outside Dimensions.....	50 x 50 x 25 mm (LxWxH)
Diameter.....	Ø 50 mm x 3 mm
Generic Material.....	EPDM / AISI 316L
Net Weight.....	0.0235 kg

## Disclaimer


Note: Our products and services are offered and sold subject to Jets Vacuum AS' General Sales Conditions, copies of which will be furnished upon request. Information provided herein is solely for information purposes, does not constitute any warranty or representation of any kind and is subject to change without notice. We strive to reproduce product colors reasonably accurate. Without prior written approval, this document or any part of may not be reproduced in any form. Jets™, Vacuumator™, Helivac™, VC™, VOD™, CVS™ and Softsound™ are trademarks and/or registered trademarks of Jets. © Jets AS. All rights reserved.



**Dimension Drawings**

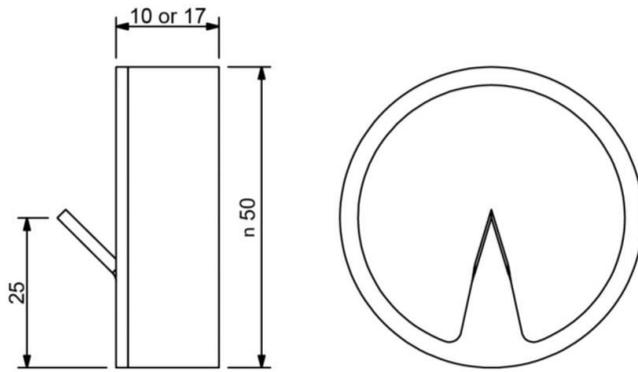

## Installation

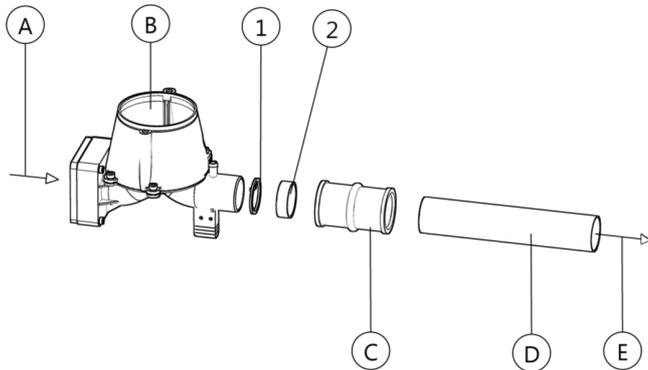

### Example 1: Installation with a Rubber Sleeve

- ① Rag Hook
- ② Pipe,  $\varnothing 50\text{mm}$  (Support Sleeve 15mm)

- (A) Inlet from the wastewater source
- (B) Valve
- (C) Rubber Sleeve
- (D) Pipe,  $\varnothing 50$
- (E) Outlet



#### 1.9 Personal Protective Equipment - Gloves


Wear suitable protective gloves at all times when working with equipment.



#### 2.11 Warning

Beware of sharp edges.

The Support Sleeve is to be inserted 30mm inside the Rubber Sleeve.

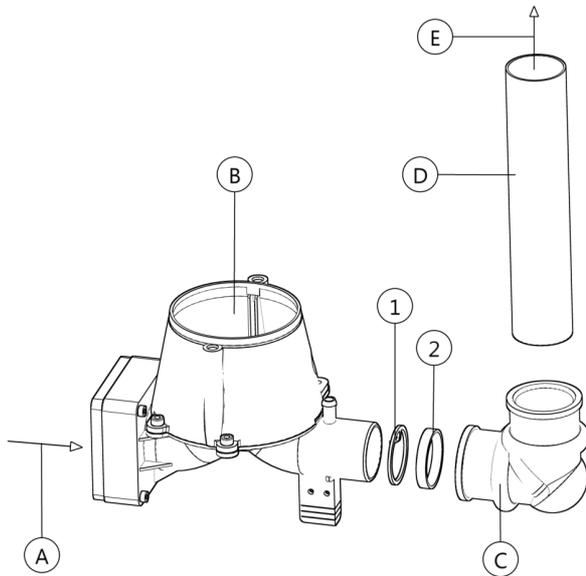

### Example 2: Installation with a Rubber Elbow

- ① Rag Hook
- ② Pipe,  $\varnothing 50\text{mm}$  (Support Sleeve 8mm)

- (A) Inlet from the wastewater source
- (B) Valve
- (C) Rubber Elbow
- (D) Pipe,  $\varnothing 50$
- (E) Outlet



#### 1.9 Personal Protective Equipment - Gloves


Wear suitable protective gloves at all times when working with equipment.



#### 2.11 Warning

Beware of sharp edges.

The Support Sleeve is to be inserted 30mm inside the Rubber Elbow.

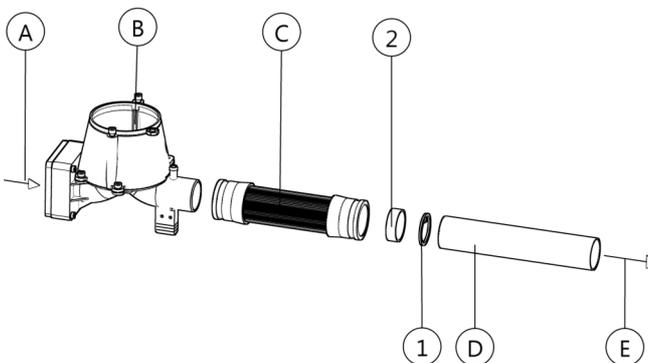

### Example 3: Installation with a Flexible Hose

- ① Rag Hook
- ② Pipe,  $\varnothing 50\text{mm}$  (Support Sleeve 15mm)

- (A) Inlet from the wastewater source
- (B) Valve
- (C) Flexible Hose,  $\varnothing 50\text{mm}$
- (D) Pipe,  $\varnothing 50$
- (E) Outlet



#### 1.9 Personal Protective Equipment - Gloves

Wear suitable protective gloves at all times when working with equipment.



#### 2.11 Warning

Beware of sharp edges.

The Support Sleeve is to be inserted 30mm inside the rubber end on the flexible hose.